

# Parts and Assembly Instructions for:

FHBB100, FHBK100, FHEC100, FHFB100, FHSD100

(Includes all colors and variations of these part numbers)



- (4) Legs
- (4) Rubber feet
- (1) Lower Bow with feet connectors
- (1) Upper Bow
- (1) Main Chair C-Frame
- (1) Bottom Flat Cushion
- (1) Leisure Cushion
- (1) Wrench
- (2) Allen Wrench
- (10) Nuts and Bolts



# Assembly Instructions for: FHBB100, FHBK100, FHEC100, FHFB100, FHSD100



1. Open the package and unwrap the four short legs and put rubber feet on each of the four legs (if not already attached).



6. Lift the chair and open the seatbelt attachment strap.




2. Connect the four legs to the X-frame on the lower bow of the Egg Chair Stand using the 4 shorter nuts and bolts.



7. Slide the seatbelt attachment strap into the securing tabs on the top of the frame.



3. Attach upper bow to lower bow to make C-frame, attach using 2 longest nuts and bolts.

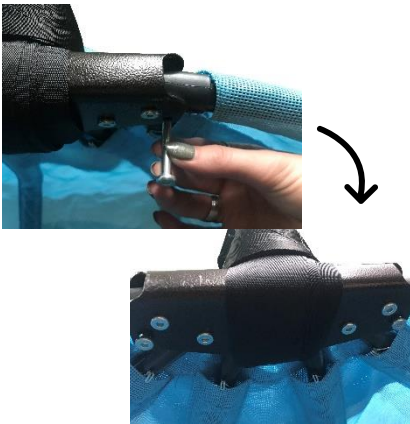

4. Open Egg Chair Frame completely and put the four smallest nuts and bolts in place.



8. Place the bottom flat cushion on the seat of the chair then place the leisure cushion on top.

Make sure the flat tops are on the inside of the chair, so they do not poke through the fabric or through the seat.



5. Close the top and bottom flaps by clasp the hooks to the eyelets.



9. Make sure all nuts and bolts are tightened throughout the stand and chair. Place in any level location and enjoy your Egg Chair!

Thank you for your business!